


400W Series



Quick
Reference

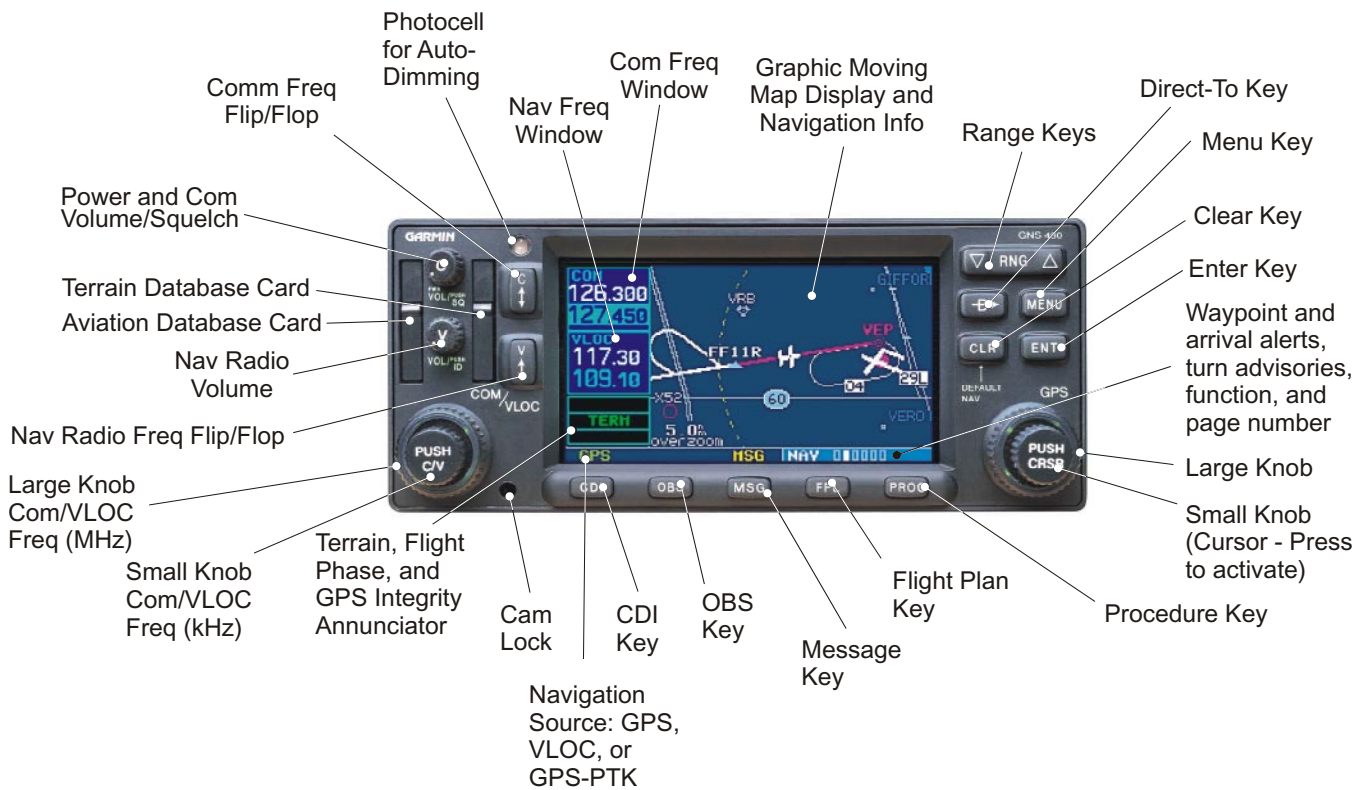

MODEL DESCRIPTIONS

Model Descriptions


This guide covers the operation of the GPS 400W, GNC 420W, GNC 420AW, GNS 430W, and GNS 430AW. In general, all models will be referred to as the 400W-series, except where there are physical or operational differences. The 400W-series units are 6.25" wide and 2.66" high. The display is a 240-by-128 pixel color LCD. The units include two removable data cards: one with a Jeppesen database (inserted in the left-most card slot) and the second is a Terrain database (inserted in the right-most card slot).

GPS 400W

The GPS 400W is a GPS-only unit with a WAAS GPS engine and is TSO C146a certified for en route, terminal, precision, and non-precision approaches. The GPS 400W can simultaneously give aviators vital approach information and weather and traffic data in relation to their position on a color moving map display. Thanks to a high-contrast color display, the information can be easily read from wide viewing angles even in direct sunlight. Its color moving map features a built-in database that shows cities, highways, railroads, rivers, lakes, coastlines, and a complete Jeppesen aviation database. The Jeppesen aviation database (can be updated with a front-loading data card) contains all airports, VORs, NDBs, Intersections, FSS, Approach, DPs/STARs, and SUA information. The obstacle and terrain databases provide an aid to navigation to help you work with approved navigation charts.

Pilots will enjoy the GPS 400W as a multi-function display (MFD), especially when it is coupled with traffic, lightning detection, and weather interfaces like Ryan TCAD, TIS from the Garmin GTX 330 Mode S transponder, L3 SKYWATCH™, or STORMSCOPE® WX 500. With the FDE prediction program included with the Trainer CD, the GPS 400W may be used for oceanic or remote operations. For the latest in graphical and textual weather infor-

mation, the GPS 400W can connect to XM Satellite Radio's XM WX Weather Service via the GDL 69/69A datalink receiver. The GDL 69A can also allow you to subscribe to XM audio services.

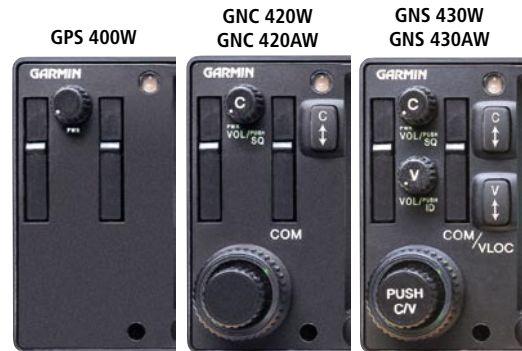

GNC 420W and GNC 420AW

The GNC 420W and GNC 420AW include all of the features of the GPS 400W, and also include an IFR certified airborne VHF communications transceiver. This multipurpose unit is available with either a 10-watt (GNS 420W) or 16-watt (GNS 420AW) Com transmitter. Since the only difference between these two units is the power of the communications transmitter, references to the GNC 420W will also include the GNC 420 AW.

GNS 430W and GNS 430AW

The GNS 430W and GNS 430AW include all of the features of the GPS 420W/420AW, and also include IFR certified airborne VOR/Localizer and Glideslope receivers. This multipurpose unit is available with either a 10-watt (GNS 430W) or 16-watt (GNS 430AW) Com transmitter. Since the only difference between these two units is the power of the communications transmitter, references to the GNS 430W will also include the GNS 430 AW.

KEYS AND KNOBS

Left-hand Keys and Knobs



In the GNC 420W and the GNS 430W, the **COM power/volume** knob controls unit power and communications radio volume. Press the knob momentarily to enable/disable automatic squelch control.



In the GNS 430W, the **VLOC volume** knob controls audio volume for the selected VOR/Localizer frequency. Press momentarily to enable/disable the ident tone.



In the GNC 420W and GNS 430W, the **large left knob** is used to tune the megahertz (MHz) value of the standby frequency for the COM transceiver or the VLOC receiver, whichever is currently selected by the tuning cursor.




In the GNC 420W and GNS 430W, the **small left knob** is used to tune the kilohertz (kHz) value of the standby frequency for the COM transceiver or the VLOC receiver, whichever is currently selected by the tuning cursor. Press this knob momentarily to toggle the tuning cursor between the COM and VLOC windows.



In the GNC 420W and GNS 430W, the **COM flip-flop** key is used to swap the active and standby COM frequencies. Press and hold to select emergency channel (121.500 MHz).



In the GNS 430W, the **VLOC flip-flop** key is used to swap the active and standby VLOC frequencies (i.e., make the selected standby frequency active).

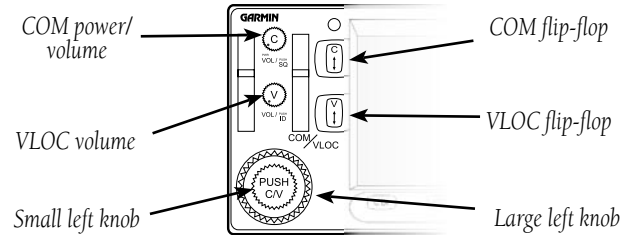

KEYS AND KNOBS

Right-hand Keys and Knobs



The **range** key (**RNG**) allows you to select the desired map scale. Press the up arrow side of the key to zoom out or the down arrow side to zoom in.



The **direct-to** key allows you to enter a destination waypoint and establishes a direct course to the selected destination.



The **menu** key (**MENU**) displays a context-sensitive options list. The options list allows you to make settings changes that relate to the currently displayed page.



The **clear** key (**CLR**) is used to erase information or cancel an entry. Press and hold this key to immediately display the Default NAV Page.




The **enter** key (**ENT**) is used to approve an operation or complete data entry. It is also used to confirm information, such as during power on.



The **large right** knob is used to select between the various page groups: NAV, WPT, AUX or NRST. With the on-screen cursor enabled, the **large right** knob allows you to move the cursor about the page.



The **small right** knob is used to select between the various pages within one of the groups listed above. Press this knob momentarily to display the on-screen cursor. The cursor allows you to enter data and/or make a selection from a list of options.

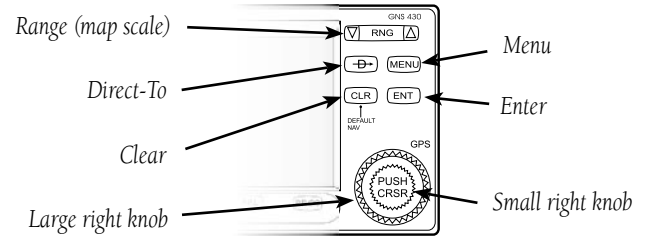

Bottom Row Keys

GPS 400W
GNC 420W



GNS 430W



NRST

The **nearest (NRST)** key (GPS 400W and GNC 420W only) displays the nearest airports page. Then, turning the **small right** knob steps through the NRST pages.

CDI

In the GNS 430W, the **CDI** key is used to toggle which navigation source (GPS or VLOC) provides output to an external HSI or CDI.

OBS

The **omni-bearing selector (OBS)** key is used for two functions: to activate OBS selection and as a suspend key.

As a Suspend (SUSP) key, it is used to select manual or automatic sequencing of waypoints. Pressing this key selects SUSP mode, which retains the current “active to” waypoint as your navigation reference even after passing the waypoint (i.e., prevents sequencing to the next waypoint). Pressing the **OBS** key again returns to normal operation, with automatic sequencing of waypoints.

Whenever OBS mode is selected, you may set the desired course to/from a waypoint using the OBS Page, or an external OBS selector on your HSI or CDI.

MSG

The **message (MSG)** key is used to view system messages, important warnings, and requirements.

FPL

The **flight plan (FPL)** key allows you to create, edit, activate and invert flight plans, as well as access approaches, departures and arrivals. A closest-point-to-flight-plan feature is also available from the **flight plan** key.


PROC

The **procedures (PROC)** key allows you to select approaches, departures and arrivals from your active flight plan. When using a flight plan, available procedures for your departure and/or arrival airport are offered automatically. Otherwise, you may select the desired airport, then the desired procedure.

POWER ON

Powering on the Unit


1. Turn the **COM power/volume** knob clockwise to turn the unit on and set the desired radio volume.
2. The Main and GPS software version page appears briefly, followed by land and terrain database pages, as the unit conducts self-tests to ensure proper operation.
3. Once the self-test concludes, database confirmation pages are displayed, showing the effective and expiration dates of the databases on the NavData® card. Press the **ENT** key to acknowledge the last database page and proceed to the instrument panel self-test page. There may be more self-test screens depending on optional equipment installed in your aircraft.
4. The instrument panel self-test page allows you to verify that the unit is communicating properly with in-panel instruments. Compare on-screen indications with the information depicted on connected instruments, such as the CDI, HSI, RMI and/or external annunciators. Once you have verified proper operation, turn the **large right** knob to select "Set Full Fuel?", "Go To Checklist", or "OK?" (to display the Satellite Status Page), and then press the **ENT** key.
5. When the GPS receiver has acquired a sufficient number of satellites to determine a position, the Map Page will automatically appear showing your present position.

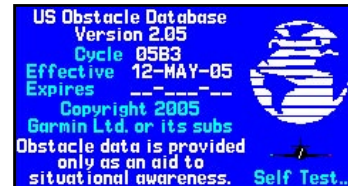

Power-up Sequence

SCREEN LAYOUT/CURSORS/FREQ SELECTION/DATA ENTRY

Screen Layout (windows)

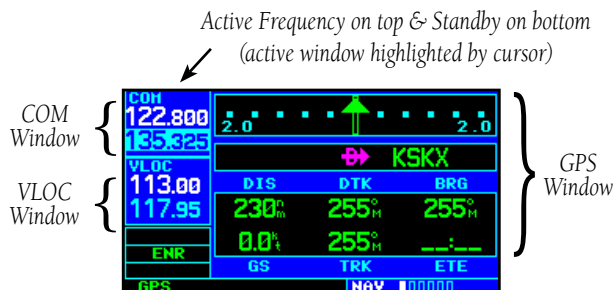

The 400W-series display is divided into four separate “windows” (or screen areas). The top left 1/4 of the display provides a COM window (top two lines) and a VLOC window (bottom two lines). The three lines at the bottom left of the display are used for terrain, flight phase, and GPS integrity annunciators. The right 3/4 of the display consists of a GPS window, which is where you’ll find the various navigation, waypoint information and settings “pages.”

Each unique screen of information is referred to as a page. Pages are typically selected using the **small** and **large right** knobs—with the cursor removed from the GPS window. See the following page for details on arrangement of the 400W-series main pages.

Cursors

There are two separate cursors: a tuning cursor and a GPS window cursor. The tuning cursor is used to select the standby COM or VLOC frequency. If desired, press the **small left** knob to move the tuning cursor to the VLOC window. Then, use the **small** and **large left** knobs to select the desired frequency. The **COM** and **VLOC flip-flop** keys are used to swap the active and standby frequencies. Push in on **small right** knob and then turn the **large right** knob to move the GPS window cursor around the page.

Frequency Selection

1. If the tuning cursor is not currently in the desired window (COM or VLOC), press the **small left** knob momentarily to switch the highlight between the COM and VLOC windows. Adjusting the frequencies with the **large** and **small left** knobs will affect the standby frequency.
2. Turn the **large left** knob to select the desired megahertz (MHz) value. For example, the “117” portion of the frequency “117.80”.
3. Turn the **small left** knob to select the desired kilohertz (kHz) value. For example, the “.80” portion of the frequency “117.80”.
4. To activate the selected frequency, press the appropriate **flip-flop** key to swap the COM or VLOC frequency from the standby into the active window.



To Quickly Tune and Activate the 121.500 Emergency Channel (GNS 430W and GNC 420W only)


1. Press and hold the **COM flip/flop** key for approximately two seconds.

Data Entry

Data is entered in the GPS window using the **large** and **small right** knobs. The **large right** knob is used to move the cursor between fields. The **small right** knob is used to select individual characters at the highlighted cursor location.



PAGE SELECTION



(Small right knob to select pages within the group)

NAV Group



Default NAV Map Terrain NAVCOM Position Satellite Status VNAV

Five, or more, NAV pages are available when the unit's installation includes connection to traffic and/or weather information sources.

WPT Group




Airport Location Airport Runway Airport Frequency Airport Approach Airport Arrival Airport Departure Intersection



NDB VOR User Waypoint

Selection of any main page is performed using the **large** and **small right** knobs. When the GPS window cursor is off, the **large right** knob selects the page group: NAV, WPT, AUX or NRST. The **small right** knob selects the desired page within a group. To quickly select the Default NAV Page, press and hold the **CLR** key.

AUX Group



Flight Planning Utility Setup 1 Setup 2

NRST Group



Nearest Airport Nearest Intersection Nearest NDB Nearest VOR Nearest User Wpt Nearest Center Nearest FSS



Nearest Airspace

(Large right knob to change page groups)

FPL Group



Active Flight Plan Flight Plan Catalog

Flight plan pages are selected by pressing the **FPL** key and using the **small right** knob to select the desired page.

PROC




Procedures


The Procedures pages are selected by pressing the **PROC** key and using the **small or large right** knobs to select a procedure.

DEFAULT NAV PAGE / ANNUNCIATORS

Default NAV Page

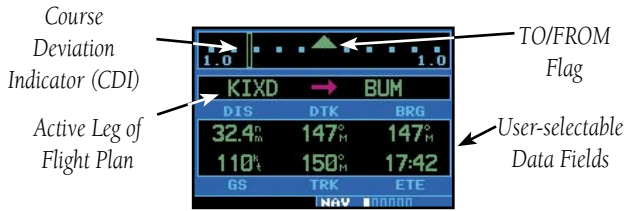

The following symbols are used (directly below the CDI) to depict the active leg of a flight plan or direct-to:

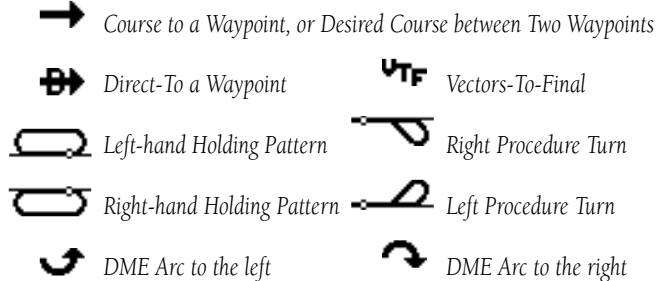

To Quickly Display the Default NAV Page

1. From any page, press and hold the **CLR** key for approximately two seconds.

Bottom Row Annunciators and Messages

Terrain annunciators:
Ter Test, Ter N/A, Terrain, Ter INHB,
and TER Fail

CDI/RAIM Mode: Approach (LNAV,
LNAV+V, L/VNAV, or LPV), Oce-
anic (OCN), Terminal (TERM), En
Route (ENR) or "0.30" (if the CDI is
manually set to "0.30" and not flying
an approach)

GPS Integrity Failure



Navigation Source:
GPS, VLOC, or GPS-PTK

OBS Mode: Suspend
(SUSP), OBS or blank (for
auto-sequencing)

Page Annunciator (NAV/WPT/AUX/
NRST/FPL/VNAV/PROC), Waypoint
Alert ("NEXT DTK"), Turn Advisory
("LT TO xxx°"), etc.

To Select a Different Data Item for any Data Field

1. With the default NAV page displayed, press the **MENU** key to display an options menu.
2. Turn the **large right** knob to highlight the "Change Fields?" option, and press the **ENT** key to select this option.
3. Use the **large right** knob to highlight the data field you wish to change.
4. Turn the **small right** knob to display the list of available data items. Continue turning the **small right** knob to select the desired data item from the list.
5. Press the **ENT** key to select the desired data item and return to the default NAV page.
6. Press the **small right** knob to remove the cursor from the page.



MAP PAGE

Map Page



The following symbols are used to depict the various airports and nav aids on the map page:

	Airport with hard surface runway(s); Primary runway shown		Intersection
	Airport with soft surface runway(s) only		VOR
	Private Airfield		VORTAC
	VOR		TACAN
	VOR/DME		NDB
	DME		Localizer
	Localizer		Locator Outer Marker
	Heliport		

To Select a Map Scale

1. Press the up arrow on the **RNG** key to zoom out to a larger map area.
2. Press the down arrow on the **RNG** key to zoom in to a smaller map area with more detail.


To Quickly Declutter the Map Display

The 400W series supports four levels of map decluttering.



1. Press the **CLR** key momentarily to change the amount of map detail. The declutter level will appear adjacent to the map scale.
2. Press the **CLR** key as needed to select the desired amount of map detail.

To Turn the Data Fields On/Off on the Right Side of the Map

1. With the map page displayed, press **MENU** to display an options menu.
 
2. Turn the **large right** knob to highlight "Data Fields Off?" and press the **ENT** key.
3. To re-display the data fields, follow steps 1 and 2, but instead select "Data Fields On?" from the options menu.

To Select a Different Data Item for any Data Field:

1. With the map page displayed, press the **MENU** key to display an options menu.
2. Turn the **large right** knob to highlight "Change Fields?" and then press **ENT**.
3. Use the **large right** knob to highlight the data field you wish to change.
4. Turn the **small right** knob to display the list of available data items. Continue turning the **small right** knob to select the desired data item from the list.
5. Press the **ENT** key to select the desired data item and return to the map page.
6. Press the **small right** knob momentarily to remove the cursor from the page.

NAVCOM PAGE / TERRAIN PAGE

NAVCOM Page

The NAVCOM page provides a list of the airport communication and navigation frequencies at your departure, en route and arrival airports.



To Select a Frequency List for a Departure, En Route, or Arrival Airport

1. Press the **small right** knob to activate the cursor.
2. Turn the **large right** knob to place the cursor on the airport identifier field (top line on the NAVCOM page).
3. Turn the **small right** knob to select the desired airport and press **ENT**.

To Scroll Through the List of Frequencies

1. Activate the cursor, if not already active, by pressing the **small right** knob.
2. Turn the **large right** knob to move the cursor through the list of frequencies. If there are more

frequencies in the list than can be displayed on the screen, a scroll bar along the right-hand side of the screen will indicate which part of the list is currently being displayed.

Auto-Tuning a Frequency from the NAVCOM Page









1. Highlight the desired frequency by scrolling through the list of frequencies, as described in the previous procedure.
2. To place a frequency in the standby field of the COM or VLOC window, highlight the desired frequency and press the **ENT** key.

Terrain Page

To display the TERRAIN Page, select the NAV group and turn the **small right** knob until the TERRAIN Page is displayed. The page displays terrain information, aircraft ground track, and GPS-derived MSL altitude. Altitude is shown in increments of 20 feet or in increments of 10 meters, depending on unit configuration. The “G” to the right of the MSL altitude display reminds the pilot that the altitude is GPS-derived.

To inhibit TERRAIN:

1. Select the TERRAIN Page and press **MENU**. “Inhibit Terrain?” is selected by default.
2. Press **ENT**. The TERRAIN system is inhibited. The **TER INHB** annunciation is displayed in the terrain annunciator field whenever terrain is inhibited.

Obstacle Symbol	Unlighted Obstacle		Lighted Obstacle		Color	TERRAIN/Obstacle Location
	< 1000' AGL	> 1000' AGL	< 1000' AGL	> 1000' AGL		
				Red	Terrain/Obstacle above or within 100 ft below current aircraft altitude	
				Yellow	Terrain/Obstacle between 100 ft and 1000 ft below the aircraft altitude	
Black					Black	TERRAIN/Obstacle is more than 1000 ft below the aircraft altitude

Terrain Color Symbology

AIRPORT INFORMATION

Viewing Airport Information

1. From any page, press and hold **CLR** to select the default NAV page. (You may skip this step if you are already viewing any of the main GPS pages.)
2. Turn the **large right** knob to select the WPT page group. "WPT" will appear in the lower right corner of the screen.
3. Turn the **small right** knob to select the desired WPT page. Airport information is displayed on the first six WPT pages: airport location, airport runway, airport frequency, airport approach, airport arrival and airport departure.
4. Press the **small right** knob to activate the cursor.
5. Use the **small** and **large right** knobs to enter the identifier of the desired airport.
6. Once the identifier is entered, the information for that airport will appear on the page. Press **ENT** to accept the selected identifier.
7. To view the other airport information pages, press the **small right** knob to remove the flashing cursor and turn the **small right** knob to select the desired page.



4. Use the **small** and **large right** knobs to enter the facility name or city location of the desired destination waypoint. As you spell the facility name or city, the 400W series Spell'N'Find feature will select the first entry in the database based upon the characters you have entered up to that point.
5. Once the name is entered, the information for that airport will appear on the page. Press **ENT** to accept the selected identifier.
6. To view the other airport information pages, press the **small right** knob to remove the flashing cursor and turn the **small right** knob to select the desired page.

Auto-Tuning a Frequency from a List (420W/430W only)

The 400W-series auto-tune feature allows you to quickly select any displayed database frequency as your standby frequency. With a minimum of keystrokes, any frequency listed on the airport frequency page can be transferred to the standby field of the COM or VLOC window. The Airport Frequency page in the GPS 500W allows you to view frequency information and scroll through the list by turning the **large right** knob.

1. Select the airport frequencies page from the WPT page group.
2. Press the **small right** knob to place the cursor on the airport identifier field.



3. Use the **small** and **large right** knobs to enter the identifier of the desired airport. Press **ENT** when finished.
4. Turn the **large right** knob to highlight the desired frequency.
5. Press **ENT** to place the highlighted frequency in the standby COM or VLOC window field (as appropriate).
6. To activate the selected frequency, press the **COM flip/flop** or **VOR flip/flop** key (as appropriate).

Viewing Airport Information by Facility Name or City

1. Select the airport location page.
2. Press the **small right** knob to activate the cursor.
3. Turn the **large right** knob to highlight the facility name (second line) or the city (third line) field.



DIRECT-TO NAVIGATION

To Select a Direct-To Destination

1. Press the **direct-to** key. A Select Direct-To Waypoint page will appear, with the waypoint identifier field highlighted.
2. Use the **small** and **large right** knobs to enter the identifier of the desired destination waypoint.
3. Press **ENT** to confirm the selected waypoint. Press **ENT** again to activate the direct-to function.



To Select a Direct-To Destination from the Map Page

1. Select the map page from the NAV page group.
2. Press the **small right** knob to display a panning pointer.
3. Turn the **small** and **large right** knobs to place the panning pointer at the desired destination location.
4. If the panning pointer is placed on an existing airport, navaid or user waypoint, the waypoint name will be highlighted. Press **direct-to** and then **ENT** twice to activate a direct-to leg to the waypoint.
5. If the panning pointer is placed on an open location on the map page, press **direct-to** and then **ENT** twice to create a "+MAP" waypoint and activate a direct-to leg to it.

To Select a Direct-To Destination by Facility Name or City

1. Press the **direct-to** key. The Select Direct-To Waypoint page will appear, with the waypoint identifier field highlighted.
2. Turn the **large right** knob to highlight the facility name (second line) or the city (third line) field.
3. Use the **small** and **large right** knobs to enter the facility name or city location of the desired destination waypoint. As you spell the facility name or city, the 400W series Spell N'Find feature will select the first entry in the database based upon the characters you have entered up to that point.
4. Continue turning the **small right** knob to scroll through any additional database listings for the selected facility name or city. You can also scroll backwards with the **small right** knob if you scroll past the desired waypoint.
5. Press **ENT** to confirm the selected waypoint, and **ENT** to activate the direct-to function.



To Select a Nearby Airport or a Flight Plan Waypoint as a Direct-To Destination

1. Press the **direct-to** key.
2. Turn the **large right** knob to highlight the nearest airport (NRST) or flight plan (FPL) field.
3. Turn the **small right** knob to display a window listing nearby airports or all waypoints in the active flight plan.
4. Continue turning the **small right** knob to scroll through the list and highlight the desired waypoint.
5. Press **ENT** to confirm the selected waypoint, and **ENT** to activate the direct-to function.

NEAREST AIRPORTS

To View a List of the Nearest Airports

1. From any page, press and hold the **CLR** key to select the default NAV page. You may skip this step if you are already viewing any of the main GPS pages.
2. Turn the **large right** knob to select the NRST page group. "NRST" will appear in the lower right corner of the screen.
3. If necessary, turn the **small right** knob to select the nearest airport page.

APT	BKG	DIS	APR
KATL	003%	0.0%	ILS
	twr 119.100	rwyt 11800%	
KFTY	334%	9.6%	ILS
	twr 118.500	rwyt 5700%	
8AS	243%	12.3%	VFR
	uni 123.000	rwyt 2600%	

To Scroll Through the List of Nearest Airports

1. Press the **small right** knob to activate the cursor.
2. Turn the **large right** knob to scroll through the list. The scroll bar along the right-hand side of the page will indicate which part of the list is currently being viewed.
3. To remove the flashing cursor, press the **small right** knob.

To View Additional Information for a Nearby Airport

1. Highlight the identifier of the desired airport by scrolling through the list, as described in the procedure above.
2. Press **ENT** to display the airport location page for the selected airport.
3. To view additional WPT pages for the selected airport (including the airport runway and airport frequency pages) press the **small right** knob to remove the flashing cursor. Turn the **small right** knob to display the additional WPT pages. When

APT KFTY Public Done?		
FACILITY & CITY NAME		
FULTON CO BROWN		
ATLANTA GA		
POSITION	ELEV	FUEL
N 33°46.75'	840'	Avgas
W084°31.29'		Jet
APR	ILS	RADAR
Yes	ARSFC	B

finished, press the **small right** knob to return the flashing cursor to the screen.

4. To return to the nearest airport page, verify that "Done?" is highlighted by the flashing cursor and press **ENT** (or press **CLR**).

APT KFTY Public Done?	
RUNWAY	
08-26	
INFO	
5700'	x 100'
Hard Srfc	Full Time

FLIGHT PLANS

To Create a New Flight Plan

1. Press the **FPL** key and turn the **small right** knob to display the flight plan catalog.
2. Press the **MENU** key to display the flight plan catalog options.
3. Turn the **large right** knob to highlight "Create New Flight Plan?" and press the **ENT** key.
4. A blank flight plan page will appear for the first empty storage location. Use the **small** and **large right** knobs to enter the identifier of the departure waypoint and press the **ENT** key.
5. Repeat step #4 above to enter the identifier for each additional flight plan waypoint. Once all waypoints have been entered, press the **small right** knob to return to the flight plan catalog.



To Navigate a Flight Plan

1. Press the **FPL** key and turn the **small right** knob to display the flight plan catalog.
2. Press the **small right** knob to activate the cursor and turn the **large right** knob to highlight the desired flight plan.
3. Press the **MENU** key to display the flight plan catalog options.
4. Turn the **large right** knob to highlight "Activate Flight Plan?" and press the **ENT** key.



To Stop Navigating a Flight Plan

1. Press the **FPL** key.
2. Press the **MENU** key to display the active flight plan options.
3. Turn the **large right** knob to highlight "Delete Flight Plan?" and press the **ENT** key. Press the **ENT** key again to confirm.



To Edit a Flight Plan


1. Press the **FPL** key and turn the **small right** knob to display the Flight Plan Catalog.
2. Press the **small right** knob to activate the cursor.
3. Turn the **large right** knob to highlight the desired flight plan and press the **ENT** key.
4. To add a waypoint to the flight plan: Turn the **large right** knob to select the point where you wish to add the new waypoint. (If an existing waypoint is highlighted, the new waypoint will be placed directly in front of this waypoint.) Use the **small** and **large right** knobs to enter the identifier of the new waypoint and press the **ENT** key.
5. To delete a waypoint from the flight plan: Turn the **large right** knob to select the waypoint you wish to delete and press the **CLR** key to display a "remove waypoint" confirmation window. With "Yes" highlighted, press the **ENT** key to remove the waypoint.
6. Once all changes have been made, press the **small right** knob to return to the flight plan catalog.

APPROACHES

Selecting Approaches

In order to select an approach, you must first have an active direct-to or flight plan that terminates at an airport with a published approach.

1. Press the **PROC** key to display the procedures page.
2. Turn the **large right** knob to highlight "Select Approach?" and press the **ENT** key.
3. A window will appear listing the available procedures. Turn the **large right** knob to highlight the desired procedure and press the **ENT** key.
4. A second window will appear listing the available transitions. Turn the **large right** knob to highlight the desired transition waypoint and press the **ENT** key. The approach "Vectors" option assumes you will receive vectors to the final course segment of the approach and will provide navigation guidance relative to the final approach course.
5. Turn the **large right** knob to highlight "Load?" or "Activate?" and press the **ENT** key. "Load?" will add the procedure to the flight plan without immediately using it for navigation guidance. This allows you to continue navigating the original flight plan, but keeps the procedure available on the active flight plan page for quick activation when needed. "Activate?" overrides the "en route" portion of the active flight plan, proceeding directly to the "approach" portion.

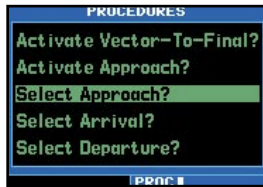

6. For non-GPS approved approaches, a reminder window will appear indicating that GPS guidance on such approaches is strictly for monitoring only—use the VLOC receiver and external CDI (or HSI) for primary navigation. To confirm this reminder, highlight "Yes?" and press the **ENT** key.



Not all approaches in the database are approved for GPS use. As you select an approach, a "GPS" designation to the right of the procedure name indicates the procedure can be flown using the GPS receiver. *Some procedures will not have this designation, meaning the GPS receiver may be used for supplemental navigation guidance only. If the GPS receiver cannot be used for primary guidance, you must use the appropriate receiver for the selected approach (e.g., VOR or ADF).* The final course segment of ILS approaches, for example, must be flown by tuning the VLOC receiver to the proper frequency and coupling the VLOC receiver to the external CDI (or HSI).


A selected approach may be *activated* or *loaded*. Activating the approach overrides the "en route" portion of the active flight plan, proceeding directly to the "approach" portion (for a full approach, directly to the approach transition). Activating the approach also initiates automatic CDI scaling transitions as the approach progresses.

In many cases, it may be easiest to "Load" the full approach while still some distance away, en route to the destination airport. Later, if vectored to final, use the following steps to select "Activating an Approach with Vectors-To-Final"—which makes the inbound course to the FAF waypoint active. Otherwise, activate the full approach using the "Activate Approach?" option.

APPROACHES

Activating an Approach


1. With an approach loaded in the active flight plan, press the **PROC** key to display the procedures page.
2. Turn the **large right** knob to highlight “Activate Approach?”.
3. Press the **ENT** key.

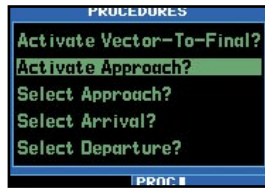

Activating an Approach with Vectors-To-Final

The “Activate Vector-To-Final?” option allows you to activate the final course segment of the approach. This option assumes you will receive vectors to the final approach course and guides you to intercept the final course, before reaching the FAF.

1. With an approach loaded in the active flight plan, press the **PROC** key to display the procedures page.
2. Turn the **large right** knob to highlight “Activate Vector-To-Final?”.
3. Press the **ENT** key.

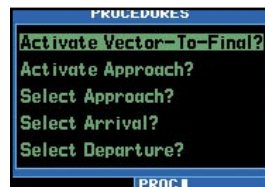

Flying an Approach

Due to the variety of available approach procedures, the specific steps required will vary according to the approach selected. Keep the following general guidelines in mind while flying the approach:

- The 400W series is designed to complement your printed approach plates and improve situational awareness throughout the approach. However, you must always fly an approach as it appears on the approach plate.

- You will typically select the destination airport as the last waypoint in the active flight plan or by using the **direct-to** key. Doing so ensures that the desired waypoint will automatically appear when choosing the “Select Approach?” option from the *procedures page*. Otherwise, you must first choose the airport, then the approach procedure.
- When a localizer-based approach (such as an ILS) is loaded, the desired frequency is automatically placed in standby on the VLOC window. To activate the frequency, press the **VLOC flip/flop** key.
- If the VLOC receiver will be used for the approach, be sure to switch the external CDI (or HSI) to “VLOC” by pressing the **CDI** key. “VLOC” will appear directly above the **CDI** key.
- An “Auto ILS CDI” setting provides automatic switching to “VLOC” as you intercept the final approach course. When the ILS approach is activated (and the correct frequency is active in the VLOC window), the unit will automatically switch within 1.2 nautical miles left or right of the approach course. This switch can take place anywhere from 2.0 to 15.0 nautical miles from the FAF. The switch occurs gradually to prevent abrupt CDI changes. This does not occur automatically when configured for the King KAP140/KFC225 autopilots as Auto ILS CDI Selection is not allowed.
- As you progress to each approach waypoint, a waypoint alert message (“NEXT DTK ###°”) will appear in the lower right corner of the display.
- When you should begin a course change (via a standard rate turn), turn advisories (“TURN TO ###°”) will appear in the lower right corner of the display.
- For GPS-based approaches, receiver autonomous integrity monitoring (RAIM) will monitor satellite conditions and alert you—using an “INTEG” at the bottom left corner of the display — if protection limits cannot be

APPROACHES

maintained. If this occurs, the GPS receiver should not be used for primary navigation guidance. Revert to an alternate navigation source, or select an alternate destination airport. LPV, LNAV+V, and L/VNAV approaches will downgrade to LNAV if GPS integrity cannot be met. There is no need to switch to guidance by other navigation equipment unless GPS LNAV is insufficient or integrity degrades further.

- Within 31 nautical miles of the destination airport, CDI scaling will transition from 2.0 NM (en route mode, or “ENR”) to 1.0 nautical mile (terminal mode, or “TERM”). Conversely, when leaving the departure airport, CDI scaling will transition from 1.0 NM to 2.0 NM when 30 miles out. GPS-based approaches will see a second transition when within 2.0 NM of the final approach fix, scaling from 1.0 NM to angular full-scale deflection (approach mode, or “LNAV, LNAV+V, L/VNAV, or LPV”).
- A "RT TO xxx° x S" or "LT TO xxx° x S" prompt will appear in the lower right corner of the display to advise you when you are at a safe distance to initiate a procedure turn. The procedure turn is displayed on the map page, but guidance through the turn itself is not provided except via roll steering-equipped autopilots.
- Alerts for proper holding pattern entry (e.g. “HOLD DIRECT”) are displayed in the lower right corner of the display. Waypoint sequencing is automatically suspended (indicated by “SUSP” directly above the **OBS** key) at the holding waypoint. Press the **OBS** key again to return to automatic waypoint sequencing. For course reversals, waypoint sequencing is suspended for one trip around the holding pattern only, after which it will return to automatic waypoint sequencing.
- The CDI will guide you through a DME arc. Just keep the needle centered as you fly along the arc.

- As you cross the missed approach point, “SUSP” will appear above the **OBS** key, indicating that automatic sequencing of waypoints is suspended at the missed approach point, and a “from” indication will appear on the CDI (or HSI).



Flying the Missed Approach

1. After crossing the Missed Approach Point, press the **OBS** key. The next waypoint in the approach is automatically offered as the destination waypoint.
2. Follow the missed approach procedures, as published on your approach plate, for proper climb and heading instructions.
3. An alert message in the lower right hand corner of the screen will recommend entry procedures for the holding pattern (e.g., “HOLD TEARDROP”). As you fly the holding pattern, a timer appears on the default NAV page. The timer automatically resets on the outbound side of the hold when you are abeam the hold waypoint. The timer again resets as you turn inbound (within approximately 30° of the inbound course).
4. The unit will provide course guidance only on the inbound side of the holding pattern, however guidance is provided along the entire holding pattern via roll steering-equipped autopilots. When leaving the holding pattern to re-fly the approach (or another approach) press the **PROC** key to “Select Approach?” or “Activate Approach?” as previously described. (Or, use the **direct-to** key to select another destination).



APPROACHES

Annunciation	Description
LPV	Follow lateral and vertical guidance to LPV minimums. A yellow background indicates the current VPL and/or HPL values are not adequate for the approach and is an early indication that downgrading will occur if conditions do not improve.
L/VNAV	GPS approach identified in the database as LNAV/VNAV. Fly to LNAV/VNAV minimums.
LNAV+V	Non-precision GPS approach with advanced vertical guidance. Note that some LNAV/VNAV approaches are not yet marked in the database as such and will show up as LNAV+V. If the chart shows the approach as LNAV/VNAV, it can be flown to LNAV/VNAV minimums.
LNAV	Non-precision GPS approach or non-GPS approach, such as ILS or Localizer.
MAPR	Missed Approach, indicates the system is providing missed approach integrity and CDI full-scale deflection ± 0.3 NM. This also shows that the pilot has initiated a Missed Approach by pressing the OBS key after crossing the MAP.
ENR	En route, CDI full-scale deflection is 2.0 NM or current CDI scale selection, whichever is smaller.
TERM	Terminal, CDI full-scale deflection is 1.0 NM or current CDI scale selection, whichever is smaller.
DPRT	Departure, indicates the system is using non-precision approach integrity. HAL = 0.3 and CDI full-scale deflection is 0.3 NM.
OCN	Oceanic, CDI full-scale deflection is 2.0 NM.
LOW ALT (lower window)	For LNAV+V, LNAV/VNAV, or LPV approaches, the LOW ALT annunciation indicates the aircraft's estimated height is lower than the Final Approach Waypoint height by more than the current VPL plus 50 meters.





© 2006 GARMIN Corporation

GARMIN International, Inc.
1200 East 151st Street, Olathe, Kansas 66062, U.S.A.

Garmin AT, Inc.
2345 Turner Rd., S.E., Salem, Oregon 97302, U.S.A.

GARMIN (Europe) Ltd.
Unit 5, The Quadrangle, Abbey Park Industrial Estate, Romsey, SO51 9AQ, U.K.

GARMIN Corporation
No. 68, Jangshu 2nd Road, Shijr, Taipei County, Taiwan

www.garmin.com

Part Number 190-00356-01 Rev. A